


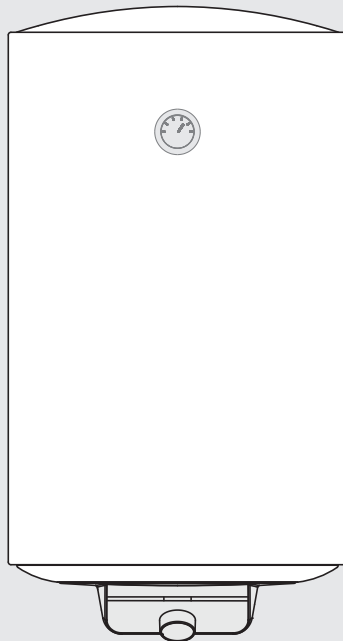

Storage Electric Water Heater FASHION SERIES

USER MANUAL

**D30-15FG
D50-15FG
D80-15FG
D100-15FG**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.
The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER 01

SAFETY INSTRUCTIONS 02

SPECIFICATIONS 04

PRODUCT OVERVIEW 05

QUICK START GUIDE 07

PRODUCT INSTALLATION 08

OPERATION INSTRUCTIONS 10

CLEANING AND MAINTENANCE 11

TROUBLESHOOTING 12

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT 13

DISPOSAL AND RECYCLING 13

DATA PROTECTION NOTICE 14

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols



Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Attention

The signal word indicates important information (e.g. damage to property), but not danger.



Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.


Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

CAUTION

Before installing this water heater, check and confirm that the earthing on the supply socket is reliably grounded. Otherwise, the electrical water heater can not be installed and used. Do not use extension boards. Incorrect installation and use of this electrical water heater may result in serious injuries and loss of property.

Special Cautions

- The supply socket must be earthed reliably. The rated current of the socket shall not be lower than 10A. The socket and plug shall be kept dry to prevent electrical leakage.
- The installation height of the supply socket shall not be lower than 1.8m.
- The wall in which the electrical water heater is installed shall be able to bear the load more than two times of the heater filled fully with water without distortion and cracks. Otherwise, other strengthening measures shall be adopted.
- The pressure relief valve attached with the heater must be installed at the cold water inlet of this heater (see Fig.1).

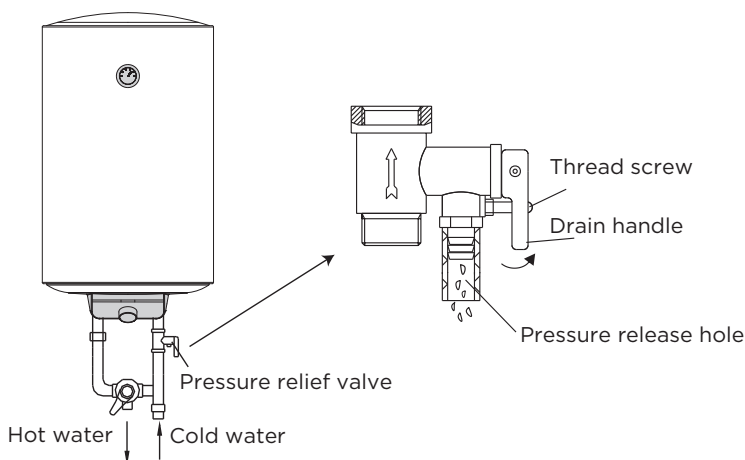

(Fig.1)

- When using the heater for the first time (or the first use after maintenance), the heater can not be switched on until it has been filled fully with water. When filling the water, at least one of the outlet valves at the outlet of the heater must be opened to exhaust the air. This valve can be closed after the heater has been filled fully with water.
- The water heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the heater.
- During heating, there may be drops of water dripping from the pressure release hole of the pressure relief valve. This is a normal phenomenon. If there is a large amount of water leak, please contact customer care center for repair. This pressure release hole shall, under no circumstances, be blocked; otherwise, the heater may be damaged, even resulting in accidents.
- The drainage pipe connected to the pressure release hole must be kept sloping downwards.


- Since the water temperature inside the heater can reach up to 75°C, the hot water must not be exposed to human bodies when it is initially used. Adjust the water temperature to a suitable temperature to avoid scalding.
- If the flexible power supply cord is damaged, the special supply cord provided by the manufacturer must be selected, and replaced by the professional maintenance personnel.
- If any parts and components of this electrical water heater are damaged please contact customer care center for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The water may drip from the discharge pipe of the pressure-relief device and that this pipe must be left open to the atmosphere; The pressure-relief device is to be operated regularly to remove lime deposits and to verify that it is not blocked;
- In order to drain away the water inside the inner container, it can be drained away from the pressure release valve. Twist the thread screw of the pressure release valve off, and lift the drain handle upwards.(See Fig.1) A discharge pipe connected to the pressure-relief device is to be installed in a continuously downward direction and in a frost-free environment.

SPECIFICATIONS

Product Model	D30-15FG	D50-15FG	D80-15FG	D100-15FG
Volume(L)	27	47	74	93
Rated Power(W)	1500	1500	1500	1500
Rated Voltage(ACV)	220-240V~	220-240V~	220-240V~	220-240V~
Rated Pressure(MPa)	0.75	0.75	0.75	0.75
Max Of WaterTemperature(°C)	80	80	80	80
Protection Class	I	I	I	I
Water Proof Class	IPX4	IPX4	IPX4	IPX4

PRODUCT OVERVIEW


Product

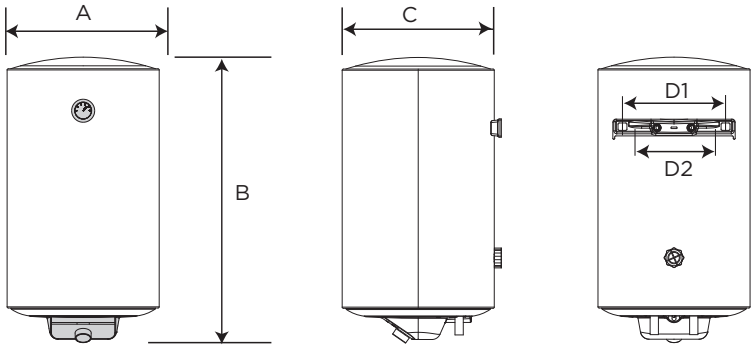

	27L	47L	74L	93L
A	340	385	450	450
B	580	715	745	895
C	340	385	450	450
D1	278	278	278	278
D2	130-310	130-310	130-310	130-310


(Note:All dimensions are in mm)

Internal Wire Diagram

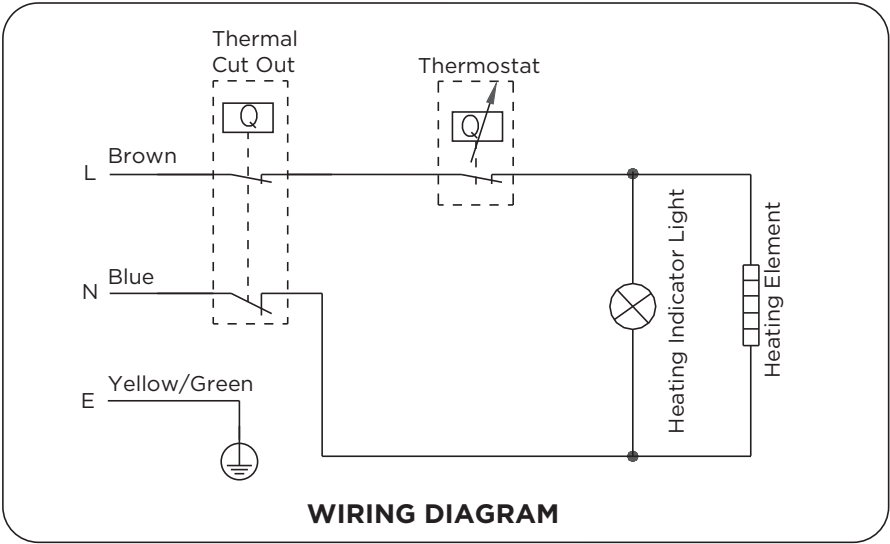

Accessories

Safety valve × 1

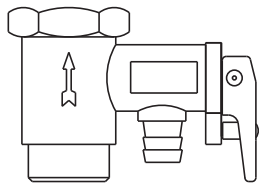

Wall hanging screw × 2



Plastic expansion pipe × 2




QUICK START GUIDE

Before First Use


CAUTION

Fill the inner tank with water before use.

1. Plug in

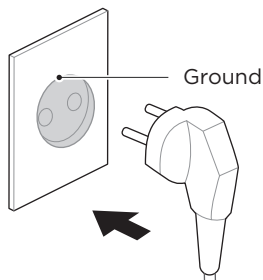

2. Rotate the thermostat knob clockwise to adjust the temperature inside the water heater.

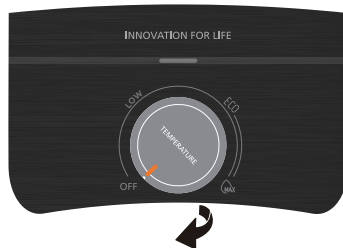

3. When the water temperature reaches the adjusted temperature, the heating will be stopped, and the heating indicator will be off. When the water temperature drops to a certain temperature, it will automatically resume heating.




4. Open the water outlet valve, you can use hot water.



PRODUCT INSTALLATION

Installation Instruction

1. This electrical water heater shall be installed on a solid wall. If the strength of the wall cannot bear the load equal to two times of the total weight of the heater filled fully with water, it is then necessary to install a special support.
2. In case of hollow bricks wall, ensure to fill it with cement concrete completely. After selecting a proper location, determine the positions of the two install holes used for expansion bolts with hook (determined according to the specification of the product you select). Make two holes in the wall with the corresponding depth by using a chopping bit with the size matching the expansion bolts attached with the machine, insert the screws, make the hook upwards, tighten the nuts to fix firmly, and then hang the electric water heater on it. (see Fig.2).

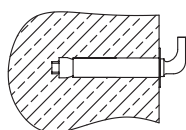

Expansion bolt (with hook)

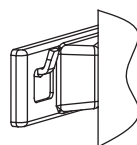



Wall hanging type

(Fig.2)

※ When the second hanging plate is used for installation, it is preferred to install in the hole (Dimension: D1). If it is installed in the lower part (dotted line position), it is necessary to confirm whether it is firm after completion (Dimension: D2)

3. Install the supply socket in the wall. The requirements for the socket are as follows: 250V/10A, single phase, three electrodes. It is recommended to place the socket on the right above the heater. The height of the socket to the ground shall not be less than 1.8m (see Fig.3).

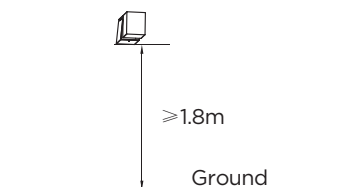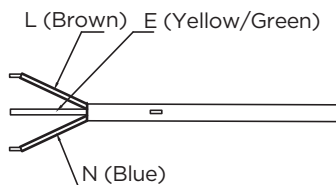


(Fig.3)

4. If the bathroom is too small, the heater can be installed at another place without sun-scorched and rain-drenched. However, in order to reduce the pipeline heat losses, the installation position of the heater shall be closed to the location shall be as near as possible to the heater.

Pipelines Connection


1. The dimension of each pipe part is G1/2" ; The massive pressure of inlet should use Pa as the unit; The minimum pressure of inlet should use Pa as the unit.

2. Connection of pressure relief valve with the heater on the inlet of the water heater.
3. In order to avoid leakage when connecting the pipelines, the rubber seal gaskets provided with the heater must be added at the end of the threads to ensure leak proof joints (see Fig.4).

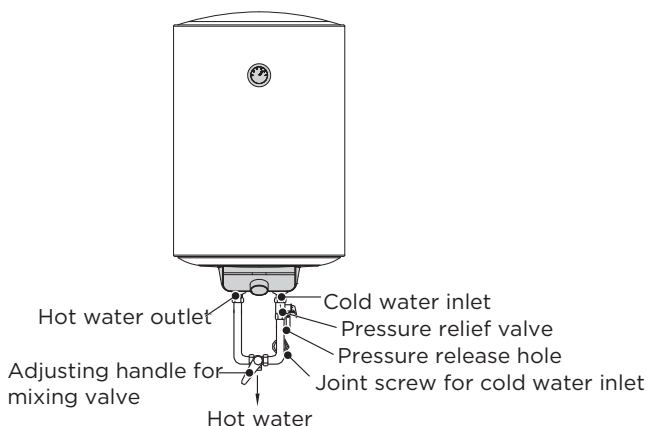

(Fig.4)

4. If the users want to realize a multi-way supply system, refer to the method shown in fig.5 for connection of the pipelines.

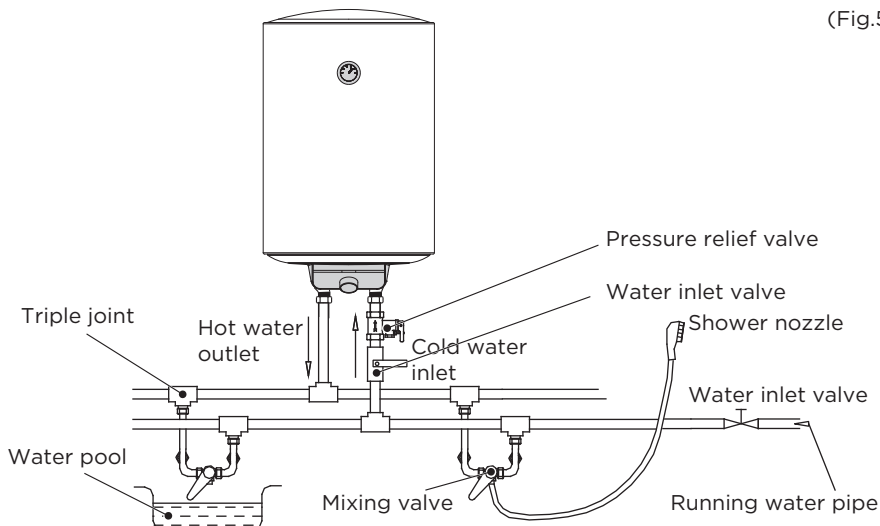

(Fig.5)

Note

Please be sure to use the accessories provided by our company to install this electric water heater. This electric water heater can not be hung on the support until it has been confirmed to be firm and reliable. Otherwise, the electric water heater may drop off from the wall, resulting in damage of the heater, even serious accidents of injury. When determining the locations of the bolt holes, it shall be ensured that there is a clearance not less than 0.2m on the right side of the electric heater, to convenient the maintenance of the heater, if necessary.

OPERATION INSTRUCTIONS


Methods of using

1. First, open any one of the outlet valves at the outlet of the water heater, then, open the inlet valve. The water heater gets filled with water. When water flows out of the outlet pipe it implies that the heater has been filled fully with water, and the outlet valve can be closed.

Note

During normal operation, the inlet valve shall be always kept open.

2. Insert the supply plug into the supply socket, the two indicator lights will light up this time.
3. The thermostat will automatically control the temperature. When the water temperature inside the heater has reached the set temperature, it will switch off automatically, when the water temperature falls below the set point the heater will be turned on automatically to restore the heating.

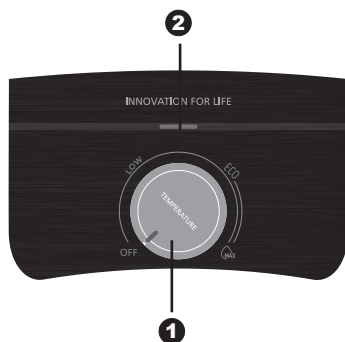


- ① **1** Temperature knob:
Turn the knob to adjust the temperature. The temperature increases when turning right and decreases when turning left
- ② **2** Heating indicator:
When the product is heated, the lamp is on, and when the heating is completed, the lamp is off
- ③  When the knob indicates Eco, the product temperature is set to about 55 °C
- ④  When the knob is turned to the icon, the product is set to 80 °C, and more hot water can appear

CLEANING AND MAINTENANCE

Warning

Do cut off power supply before maintenance, to avoid danger like electric shock.

1. Check the power plug and outlet as often as possible. Secure electrical contact and also proper grounding must be provided. The plug and outlet must not heat excessively.
2. If the heater is not used for a long time, especially in regions with low air temperature (below 0°C), it is necessary to drain water from the heater to prevent damage of the water heater, due to water freezing in the internal tank. (Refer Cautions in this manual for the method to drain away the water from the inner container).
3. To ensure long reliable water heater operation, it is recommended to regularly clean the internal tank and remove deposits on the electric heating element of the water heater, as well as check condition (fully decomposed or not) of the magnesium anode and, if necessary, replace it with a new one in case of full decomposition. Tank cleaning frequency depends on hardness of water located in this territory. Cleaning must be performed by special maintenance services. You can ask the seller for address of the nearest service center.
4. The water heater is equipped with a thermal switch, which cuts off power supply of the heating element upon water overheating or its absence in the water heater. If the water heater is connected to the mains, but water is not heated and the indicator doesn't light up, then the thermal switch was switched off or not switched on. To reset the water heater to the operating condition, it is necessary to:
 1. De-energize the water heater, remove the plate of the side/lower cover.
 2. Press the button, located at the center of the plate of the thermal switch, see Fig.6;
 3. If the button is not pressed and there is no clicking, then you should wait until the thermal switch cools down to the initial temperature.

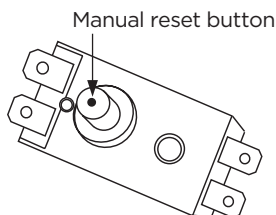

(Fig.6)

Warning

Non-professionals are not allowed to disassemble the thermal switch to reset. Please contact professionals to maintain. Otherwise our company will not take responsibility if any quality accident happens because of this.

TROUBLESHOOTING

Failures	Reasons	Treatment
The heating indicator light is off.	Failures of the temperature controller.	Contact with the professional personnel for repair.
No water coming out of the hot water outlet.	1. The running water supply is cut off.	1. Wait for restoration of running water supply.
	2. The hydraulic pressure is too low.	2. Use the heater again when the hydraulic pressure is increased.
	3. The inlet valve of running water is not open.	3. Open the inlet valve of running water.
The water temperature is too high.	Failures of the temperature control system.	Contact with the professional personnel for repair.
Water leak.	Seal problem of the joint of each pipe.	Seal up the joints.

 Note

Parts illustrated in this use and care manual are indicative only, parts provided with the product may differ with illustrations. This product is intended for household use only. Specifications are subject to change without notice.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.



Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.


Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



make yourself at home



www.midea.com

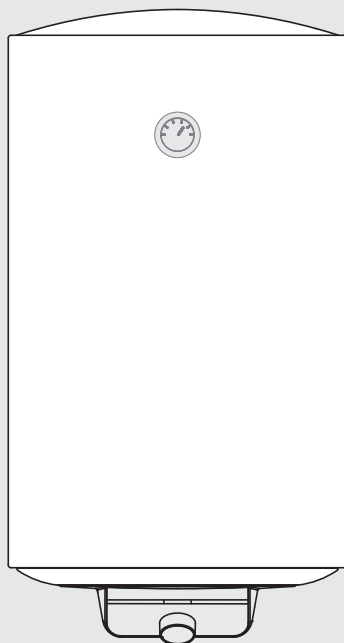

**Încălzitor electric de apă cu acumulare
SERII DE MODĂ**

MANUAL UTILIZATOR

**D30-15FG
D50-15FG
D80-15FG
D100-15FG**

Avertizări: Înainte de a utiliza acest produs, vă rugăm să citiți cu atenție acest manual și să îl păstrați pentru a-l putea consulta în viitor.

Designul și specificațiile pot fi modificate fără o notificare prealabilă pentru îmbunătățirea produsului. Consultați distribuitorul sau producătorul pentru detalii.

Diagrama de mai sus are caracter pur orientativ. Luați ca reper aspectul produsului propriu-zis.

SCRISOARE DE MULȚUMIRE

Vă mulțumim că ați ales Midea! Înainte de a utiliza noul dvs. produs Midea, vă rugăm să citiți acest manual cu atenție, pentru a vă asigura că știți cum să utilizați într-o manieră sigură caracteristicile și funcțiile pe care le oferă noul dvs. aparat.

CUPRINS

SCRISOARE DE MULȚUMIRE	01
INSTRUCȚIUNI DE SIGURANȚĂ	02
SPECIFICAȚII	04
PREZENTAREA PRODUSULUI	05
GHID DE PORNIRE RAPIDĂ	07
INSTALAREA PRODUSULUI	08
INSTRUCȚIUNI DE OPERARE	10
CURĂȚAREA ȘI ÎNTREȚINEREA	11
DEPANAREA	12
MĂRCI COMERCIALE, DREPTURI DE AUTOR ȘI DECLARAȚIE JURIDICĂ	13
ELIMINAREA ȘI RECICLAREA	13
NOTĂ PRIVIND PROTECȚIA DATELOR	14

INSTRUCȚIUNI DE SIGURANȚĂ

Utilizarea prevăzută

Următoarele orientări privind siguranța au ca scop prevenirea pericolelor neprevăzute sau a deteriorării aparatului ca urmare o utilizării nesigure sau incorecte. Vă rugăm să verificați ambalajul și aparatul la sosire pentru a vă asigura că totul este intact, astfel încât să fie asigurată funcționarea sigură. Dacă observați deteriorări, vă rugăm să contactați furnizorul sau comerciantul. Vă rugăm să rețineți că, din motive legate de siguranța dvs., modificările aparatului nu sunt permise. Utilizarea neadecvată poate genera riscuri și pierderea dreptului la garanție.

Explicarea simbolurilor



Avertisment

Cuvântul de avertizare indică un pericol cu nivel mediu de risc, care, dacă nu este evitat, poate cauza decesul sau vătămări corporale grave.



Atenție

Cuvântul de avertizare indică informații importante (de ex. daune materiale), dar nu și pericole.



Precauție

Cuvântul de avertizare indică un pericol cu nivel scăzut de risc, care, dacă nu este evitat, poate cauza vătămarea corporală minoră sau moderată.


Citiți aceste instrucțiuni de operare cu atenție înainte de a utiliza/pune în funcțiune unitatea și păstrați-le în imediata apropiere a locului de instalare sau a unității pentru utilizări ulterioare!

Precautii

Înainte de a instala acest boiler electric, verificați și confirmați că împământarea de la priza de alimentare este corect realizată. În caz contrar, încălzitorul electric de apă nu poate fi instalat și utilizat. Nu folosiți prelungitoare. Instalarea și utilizarea incorectă a acestuia în încălzitor electric de apă poate duce la răni grave și pierderea bunurilor.

Precautii Speciale

- Priza de alimentare trebuie realizată corect. Curentul nominal al prizei nu trebuie să fie mai mic de 10A. Priza și stecherul trebuie păstrate uscate pentru a preveni scurgerile electrice.
- Înălțimea de instalare a prizei de alimentare nu trebuie să fie mai mică de 1,8 m.
- Acest încălzitor electric de apă va fi instalat pe un perete solid care trebuie să suporte o sarcină egală cu de două ori greutatea totală a încălzitorului umplut complet cu apă, fără denaturare și fisuri. În caz contrar, se adoptă alte măsuri de consolidare.
- Supapa de eliberare a presiunii atașată la încălzitor trebuie instalată la intrarea de apă rece a acestuia (vezi Fig.1).

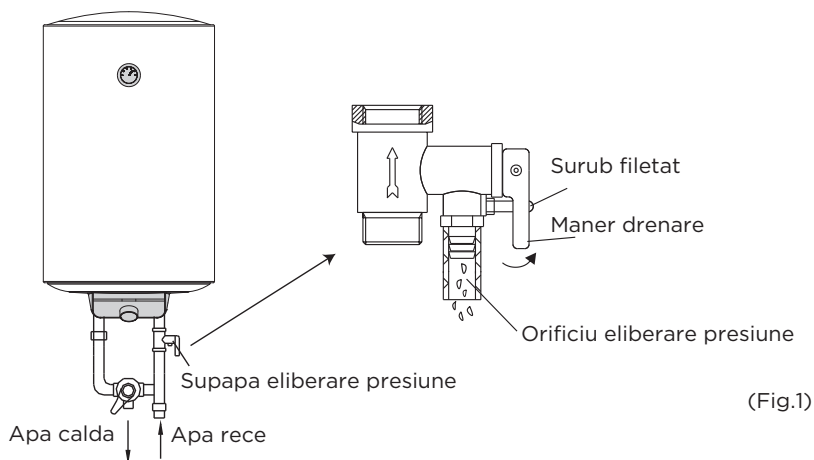

(Fig.1)

- Când utilizați boilerul pentru prima dată (sau la prima utilizare după întreținere), acesta nu poate fi pornit până când nu este umplut complet cu apă. La umplerea cu apă, deschideți un robinet de apă caldă pentru a evacua aerul. Acest robinet poate fi închis după ce boilerul a fost umplut complet cu apă.
- Boilerul nu este destinat utilizării de către persoane (inclusiv copii) cu capacități fizice, senzoriale sau mentale reduse sau cu lipsa de experiență și cunoștințe, cu excepția cazului în care acestea au fost instruite privind utilizarea aparatului de către o persoană responsabilă pentru siguranța lor. Copiii trebuie supravegheați pentru a se asigura că nu se joacă cu boilerul.
- În timpul încălzirii, pot apărea picături de apă din orificiul de eliberare a presiunii al supapei de presiune. Acesta este un fenomen normal. În caz de scurgeri abundente, rugăm să contactați centrul de asistență pentru clienți. Acest orificiu de eliberare a presiunii nu trebuie, în niciun caz, blocat; în caz contrar, boilerul poate fi deteriorat, conducând la accidente grave.
- Conducta de drenaj conectată la orificiul de eliberare a presiunii trebuie menținută înclinată în jos.


- Deoarece temperatura apei din interiorul boilerului poate ajunge pana la 75°C, corpul uman nu trebuie expus la apa calda atunci cand este utilizata initial.
Reglati temperatura apei la o temperatura adecvata pentru a evita oparirea.
- Daca cablul flexibil de alimentare este deteriorat, apelati la personal calificat pentru inlocuirea acestuia cu un cablu de alimentare special furnizat de producator.
- Daca vreo piesa sau componente ale acestui boiler electric sunt deteriorate, va rugam sa contactati centrul service pentru reparatii.
- Acest aparat nu este destinat utilizarii de catre persoane (inclusiv copii) cu capacitati fizice, senzoriale sau mentale reduse sau cu lipsa de experienta si cunostinte, cu exceptia cazului in care acestea au fost instruite cu privire la utilizarea aparatului de catre o persoana responsabila pentru siguranta lor.
- Copiii trebuie supravegheati pentru a se asigura ca nu se joaca cu boilerul.
- Pentru ca pot aparea scurgeri din conducta dispozitivului de eliberare a presiunii, aceasta trebuie lasata deschisa in atmosfera; Dispozitivul de eliberare a presiunii trebuie operat(curatat) in mod regulat pentru a indeparta depunerile de calcar si pentru a verifica daca nu este blocat;
- Apa din interiorul recipientului interior poate fi evacuata prin supapa de eliberare a presiunii. Rasuciti surubul supapei de eliberare a presiunii si ridicati manerul de scurgere in sus. (A se vedea fig.1) O conducta de refulare conectata la dispozitivul de reducere a presiunii trebuie instalata in directie jos si intr-un mediu ferit de inghet.

SPECIFICAȚII

Model	D30-15FG	D50-15FG	D80-15FG	D100-15FG
Volum(L)	27	47	74	93
Putere nominala(W)	1500	1500	1500	1500
Tensiune nominala(ACV)	220-240V~	220-240V~	220-240V~	220-240V~
Presiune nominala (MPa)	0.75	0.75	0.75	0.75
Max temperatura apa (°C)	80	80	80	80
Clasa protectie	I	I	I	I
Grad impermeabilitate	IPX4	IPX4	IPX4	IPX4

PREZENTAREA PRODUSULUI


Produs

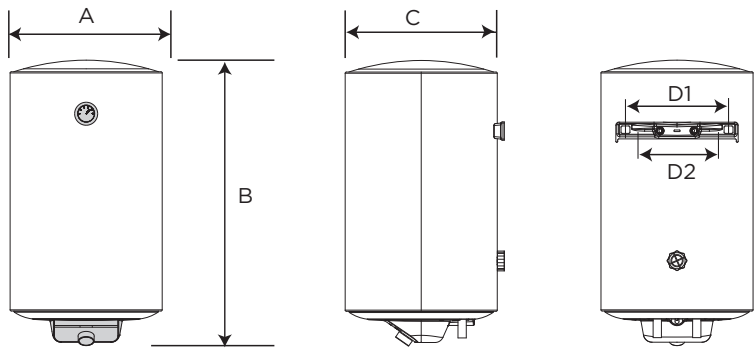

	27L	47L	74L	93L
A	340	385	450	450
B	580	715	745	895
C	340	385	450	450
D1	278	278	278	278
D2	130-310	130-310	130-310	130-310


(Nota: Toate dimensiunile sunt in mm)

Diagramă fir intern

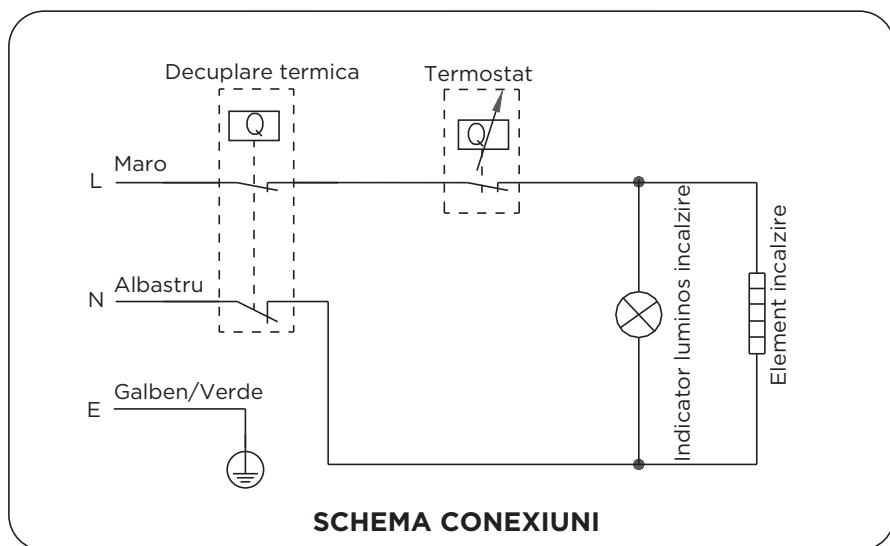

Accesorii

Supapă de siguranță × 1

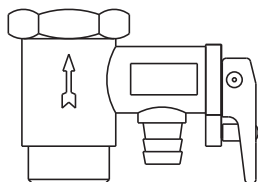

Șurub de fixare pe perete × 2



Țeavă de expansiune din plastic × 2




GHID DE PORNIRE RAPIDĂ

Înainte de prima utilizare


⚠ PRECAUȚIE

Umpleți rezervorul interior cu apă înainte de utilizare.

1. Conectați-l

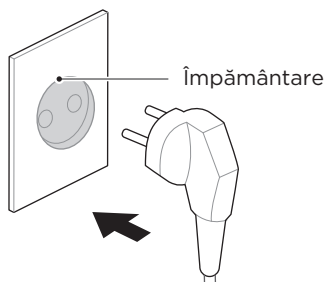

2. Rotiți butonul termostatlui în sensul acelor de ceasornic pentru a regla temperatura din interiorul încălzitorului de apă.

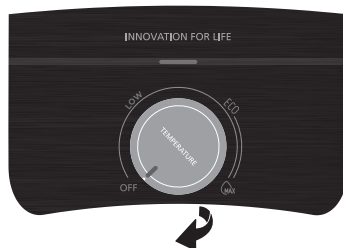

3. Când temperatura apei atinge temperatura reglată, încălzirea va fi oprită, iar indicatorul de încălzire va fi oprit. Când temperatura apei scade la o anumită temperatură, aceasta va relua automat încălzirea.




4. Deschideți supapa de evacuare a apei, puteți utiliza apă caldă.



INSTALAREA PRODUSULUI

Instrucțiuni de instalare

1. Acest incalzitor electric de apa va fi instalat pe un perete solid. Daca rezistenta peretelui nu poate suporta o sarcina egala cu de doua ori greutatea totala a incalzitorului umplut complet cu apa, atunci este necesar sa instalati un suport special. In cazul peretelui de caramizi goale, asigurati-va ca il umpleti complet cu beton.
2. Dupa selectarea unei locatii adecvate, determinati pozitiile celor doua gauri de instalare utilizate pentru conexiunduri cu carlig (200 mm), faceti doua gauri in perete cu adancimea corespunzatoare utilizand un burghiu cu dimensiunea care se potriveste cu conexiundurile atasate, introduceti suruburile, indreptati carligul in sus, strangeti piulitele pentru a se fixa ferm si apoi atarnati boilerul electric de el (vezi Fig.2).

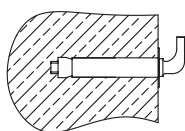

Conexiund
(cu carlig)

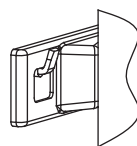



Tip 1 agatare pe perete

(Fig.2)

※ Cand a doua placa de suspendare este utilizata pentru instalare, este de preferat sa se instaleze in orificiu (Dimensiune: D1). Daca este instalata in partea inferioara (pozitia liniei punctate), este necesar sa se confirme daca este ferma dupa finalizare (Dimensiune: D2)

3. Instalati priza de alimentare in perete. Cerintele pentru priza sunt urmatoarele: 250V/10A, monofazat, trei conexiuni. Este recomandat sa plasati priza in partea dreapta sus deasupra boilerului. Inaltimea prizei pana la sol nu trebuie sa fie mai mica de 1,8 m (vezi Fig.3).

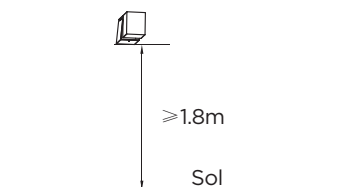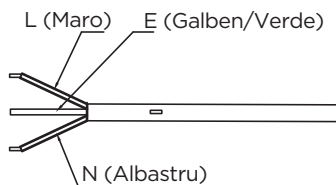


(Fig.3)

4. Daca baia este prea mica, incalzitorul poate fi instalat in alt loc. Cu toate acestea, pentru a reduce pierderile de caldura pe traseul de conducte, pozitionarea boilerului trebuie sa fie cat mai apropiata de locatia unde va fi utilizat.

Conexiunea Conductelor


1. Dimensiunea fiecarei parti de teava este G1/2" .
2. Conectarea supapei de limitare a presiunii cu boilerul de la intrarea acestuia de apa.

3. Pentru a evita scurgerile la conectarea conductelor, garniturile de etansare din cauciuc furnizate cu boilerul trebuie adaugate la capatul filetelor pentru a asigura imbinarile etanse (vezi fig. 5)

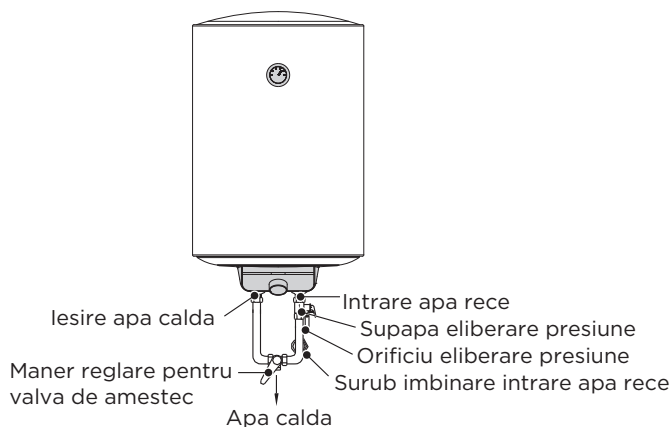

(Fig.4)

4. Daca utilizatorii doresc sa realizeze un sistem de alimentare cu mai multe cai, consultati metoda prezentata in fig.5 pentru conectarea conductelor.

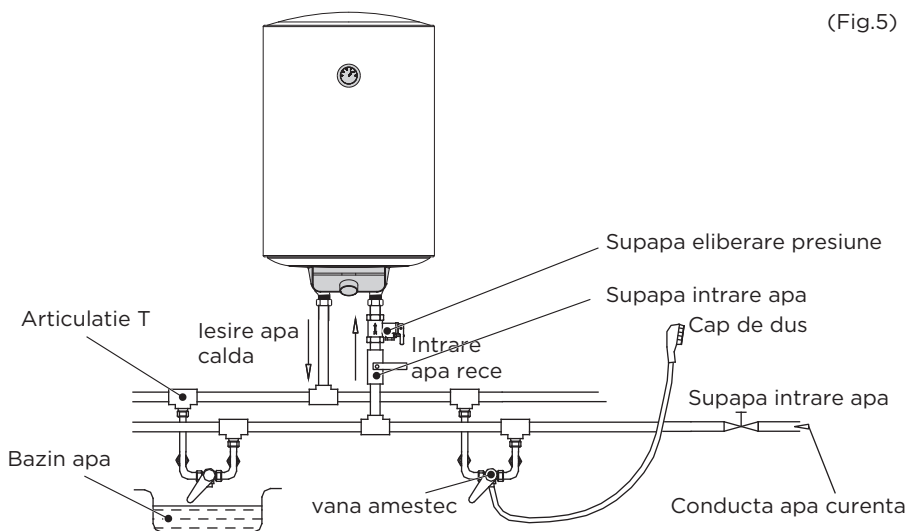

(Fig.5)

NOTA

Asigurati-va ca utilizati accesoriile furnizate de compania noastra pentru a instala acest boiler electric. Boilerul Inu poate fi instalat decat pe un suport ferm. In caz contrar, boilerul poate cadea de pe perete si se va deteriora putand produce accidente grave. La determinarea pozitiilor orificiilor pentru suruburi, se va asigura ca exista un spatiu liber nu mai mic de 0,2 m pe partea dreapta a boilerului, pentru a usura intretinerea daca este necesara.

INSTRUCȚIUNI DE OPERARE


Metode Utilizare

- Intai, deschideti oricare dintre robinetii de iesire apa calda, apoi deschideti robinetul de intrare apa rece. Boilerul se va umple cu apa. Cand apa va curge prin conducta de iesire, insemna ca boilerul este complet incarcat, iar robinetul de iesire poate fi inchis.

NOTA

In timpul functionarii normale, alimentarea cu apa rece trebuie sa fie intotdeauna.

- Introduceti stecherul in priza, indicatorul va lumina de aceasta data.
- Termostatul va controla automat temperatura. Cand temperatura din interiorul boilerului a atins valoarea setata, se va inchide automat. Cand temperatura setata scade sub punctul minim, boilerul porneste automat, reluand incalzirea.

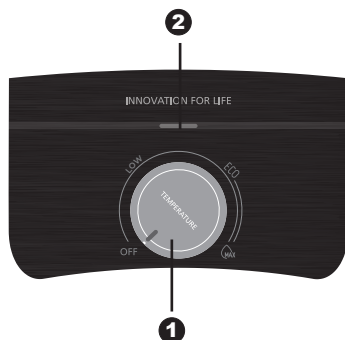

- ① **1 Buton temperatura:**
 - Rotiti butonul pentru a regla temperatura. Aceasta creste la rotirea spre dreapta si descreste la rotirea spre stanga.
- ② **2 Indicator incalzire:**
 - Cand aparatul incalzeste, LED-ul este pornit, cand incalzirea este completa, LED-ul este inchis.
- ③ **ECO** • Cand butonul indica Eco, temperatura este setata la cca 55 °C.
- ④ **MAX** • Daca butonul este rotit catre icoana, temperatura este setata la 80 °C, si se poate produce mai multa apa fierbinte.


CURĂȚAREA ȘI ÎNTREȚINEREA

⚠️ AVERTIZARE

Înainte de a efectua întreținerea, vă rugăm să întrerupeți alimentarea cu energie electrică.

- Verificați stecherul și priza de alimentare cât mai des posibil. Trebuie asigurată împământarea și un contact electric sigur. Stecherul și priza nu trebuie să se încălzească excesiv.
- Dacă boilerul nu este utilizat pentru o perioadă lungă de timp, în special în regiunile cu temperatură scăzută a aerului (sub 0 °C) este necesară evacuarea apei din el pentru a preveni deteriorarea. (Consultați Atenționări din acest manual pentru metoda de scurgere a apei din recipientul interior).
- Pentru a asigura o funcționare de lungă durată și fiabilă a boilerului, recomandăm curățarea cu regularitate a interiorului și îndepărtarea depunerilor de pe elementul de încălzire. Verificați starea anodului de magneziu (complet descompus sau nu) și, dacă este necesar, înlocuiți-l cu unul nou (în caz de descompunere completă). Frecvența curățării rezervorului depinde de duritatea apei de pe teritoriul (zona, regiunea, țara) utilizatorului. Curățarea trebuie efectuată de către personal autorizat. Cereți vânzătorului adresa celui mai apropiat centru service.
- Boilerul este echipat cu un întrerupător termic, care întrerupe alimentarea cu energie electrică a elementului de încălzire la supraîncălzirea apei sau la absența apei în încălzitorul de apă. Dacă boilerul este conectat la rețea, dar apa nu este încălzită și indicatorul nu se aprinde, atunci comutatorul termic a fost oprit sau nu a fost pornit. Pentru a reseta boilerul la starea de funcționare, este necesar să:

Buton resetare manuală

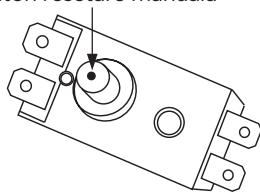

(Fig.6)

⚠️ AVERTIZARE

Persoanele necalificate nu au voie să demonteze comutatorul termic pentru a reseta. Vă rugăm să contactați un serviciu autorizat pentru întreținere. În caz contrar, compania noastră nu își asumă nici un fel de responsabilitate pentru eventualele accidente sau pierderea calității aparatului.

DEPANAREA

Erori	Cauze	Remedieri
Indicatorul luminos de încălzire este stins.	Defectiuni ale regulatorului de temperatura.	Contactați personal profesionist pentru reparatii.
Nu iese apa din iesirea de apa calda.	1. Alimentarea cu apacurenta este intrerupta.	1. Așteptați restabilirea alimentarii cu apa curenta.
	2. Presiunea hidraulica este prea scazuta.	2. Folositi din nou incalzitorul cand presiunea hidraulica creste.
	3. Supapa de admisie a apei curente nu este deschisa.	3. Supapa de admisie a apei curente nu este deschisa.
Temperatura apei este prea mare.	Defectiuni ale sistemului de control al temperaturii.	Contactați personal profesionist pentru reparatii.
Scurgeri apa	Probleme de etansare a imbinarii fiecărei conducte.	Etansati imbinarile.

NOTA

Partile ilustrate in acest manual de utilizare si intretinere sunt doar orientative, piesele furnizate impreuna cu produsul pot diferi de ilustratii. Acest produs este destinat numai pentru uz casnic. Specificatiile pot fi modificate fara notificare.

MĂRCI COMERCIALE, DREPTURI DE AUTOR ȘI DECLARAȚIE JURIDICĂ



Sigla, mărcile verbale, denumirea comercială, întreaga imagine comercială și toate versiunile acestora constituie active valoroase ale grupului Midea și/sau ale companiilor afiliate acestuia („Midea”), în cadrul căruia Midea deține mărci comerciale, drepturi de autor și alte drepturi de proprietate intelectuală și întregul fond comercial generat de utilizarea oricărei părți a unei mărci comerciale Midea. Utilizarea mărcii comerciale Midea în scopuri comerciale fără acordul prealabil în scris al Midea poate constitui încălcarea mărcii comerciale sau concurență neloială ce încalcă legislația relevantă.

Acest manual este creat de Midea și Midea își rezervă toate drepturile de autor ale acestuia. Nicio entitate sau individ nu are voie să utilizeze, să reproducă, să modifice, să distribuie în întregime sau parțial sau să grupeze sau să vândă împreună cu alte produse acest manual fără acordul prealabil în scris al Midea.

Toate funcțiile și instrucțiunile descrise au fost actuale la momentul tipăririi acestui manual. Totuși, produsul propriu-zis poate să difere din cauza funcțiilor și design-urilor îmbunătățite.

ELIMINAREA ȘI RECICLAREA

Instrucțiuni importante pentru mediu

Conformitatea cu directiva DEEE și eliminarea produsului ca deșeu:
Acest produs este conform cu Directiva DEEE (2012/19/UE). Acest produs poartă simbolul de clasificare pentru deșeurile de echipamente electrice și electronice (DEEE). Acest simbol indică faptul că acest produs nu va fi eliminat împreună cu alte deșeurile menajere la sfârșitul duratei sale de viață. Dispozitivul utilizat trebuie returnat la punctul oficial de colectare pentru reciclarea dispozitivelor electronice electrice. Pentru găsirea acestor sisteme de colectare, contactați autoritățile dvs. locale sau distribuitorul cu amănuntul de unde ați achiziționat produsul. Fiecare gospodărie joacă un rol important în recuperarea și reciclarea aparatului vechi. Eliminarea adecvată a aparatului uzat ajută la prevenirea potențialelor consecințe negative asupra mediului și sănătății umane.



Conformitatea cu Directiva RoHS

Produsul pe care l-ați achiziționat este conform cu Directiva UE RoHS (2011/65/UE). Acesta nu conține materiale dăunătoare sau interzise specificate în directivă.

Informații privind ambalajul

Materialele de ambalare ale produsului sunt produse din materiale reciclabile în conformitate cu Regulamentele noastre naționale privind protecția mediului. Nu eliminați materialele de ambalare împreună cu deșeuri menajere sau cu alte deșeuri. Duceți-le în puncte de colectare a materialelor de ambalare, desemnate de autoritățile locale.



NOTĂ PRIVIND PROTECȚIA DATELOR

Pentru furnizarea serviciilor convenite cu clientul, suntem de acord să ne conformăm fără restricții tuturor dispozițiilor legislației aplicabile privind protecția datelor, în conformitate cu statele convenite în care serviciile vor fi furnizate clientului, precum și, după caz, cu Regulamentul General privind Protecția Datelor al UE (RGPD).

În general, procesarea datelor de către noi servește la îndeplinirea obligației noastre din contractul încheiat cu dvs. și din motive de siguranță a produsului, pentru salvagardarea drepturilor dvs. în ceea ce privește garanția și înregistrarea produsului. În anumite cazuri, însă numai dacă se asigură o protecție adecvată a datelor, datele cu caracter personal ar putea fi transferate către destinatari din afara Spațiului Economic european.

Informații suplimentare se furnizează la cerere. Puteți contacta responsabilul nostru pentru protecția datelor la **MideaDPO@midea.com**. Pentru exercitarea drepturilor dvs. precum dreptul de a vă opune procesării datelor dvs. cu caracter personal în scopuri de marketing direct, vă rugăm să ne contactați prin **MideaDPO@midea.com**. Pentru informații suplimentare, vă rugăm să urmați codul QR.



make yourself at home



www.midea.com