

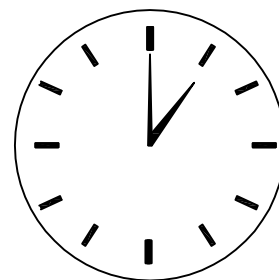
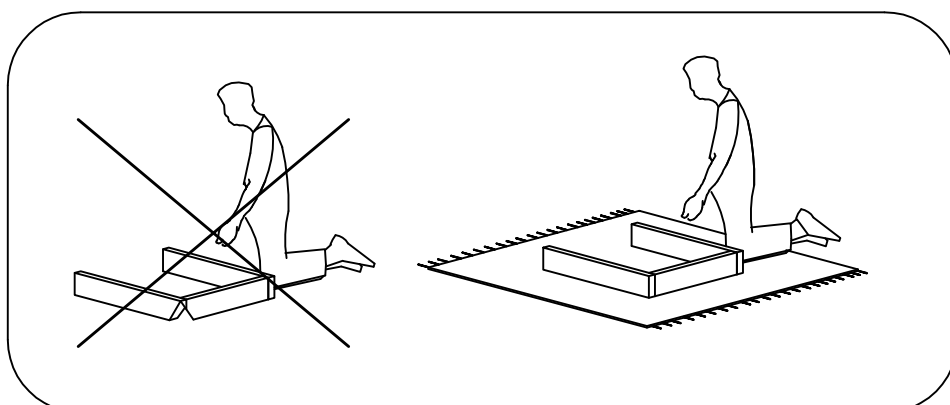
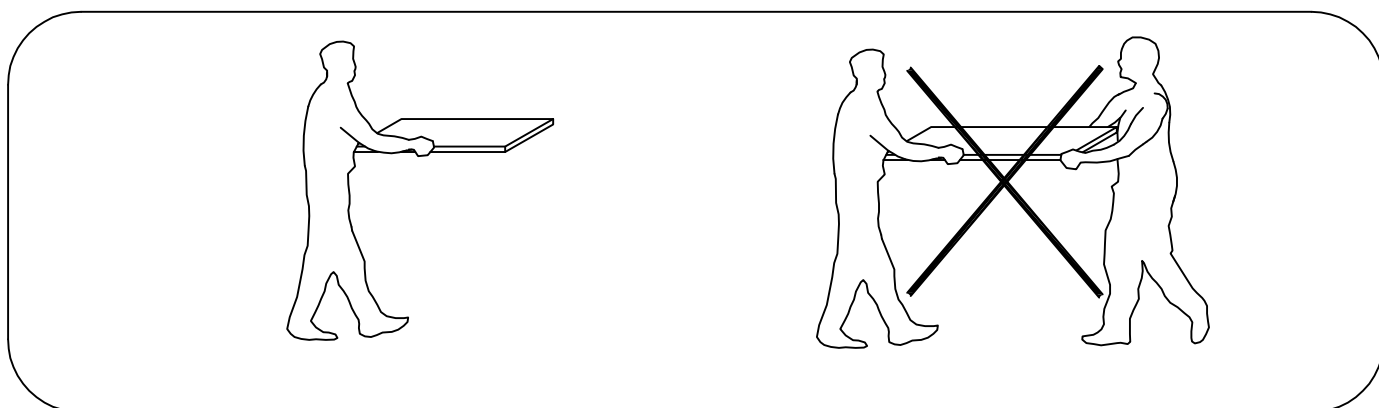
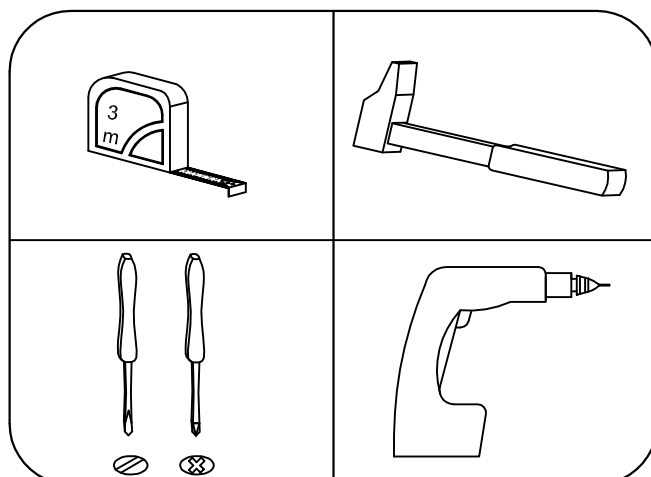



Berlini 900x2000






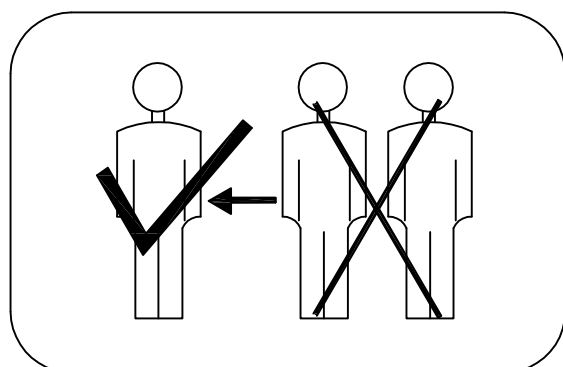


90 min.

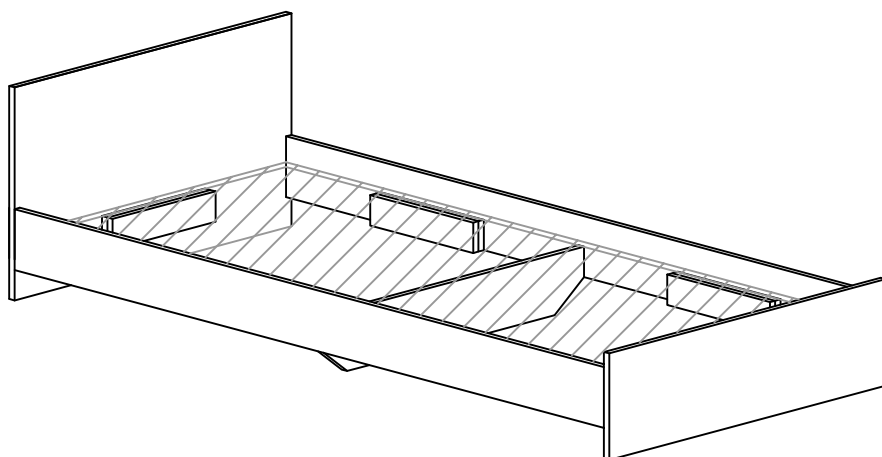


<http://www.irimbg.com/instructions/>

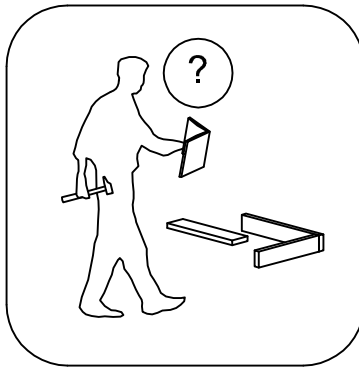


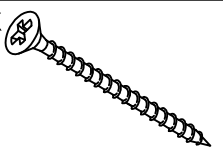

10x   10174	12x  Φ 8/30 10013	10x  50317	6x  50246
25x  Φ 3,5/30 10004	12x  Φ 3,5/20 10002		

	 	Box number
A	2x 2010x200	1/3
B	910x200	1/3
C	942x350	2/3
D	942x700	2/3
E	12x 350x100	1,2/3
F	908x2008	3/3


1

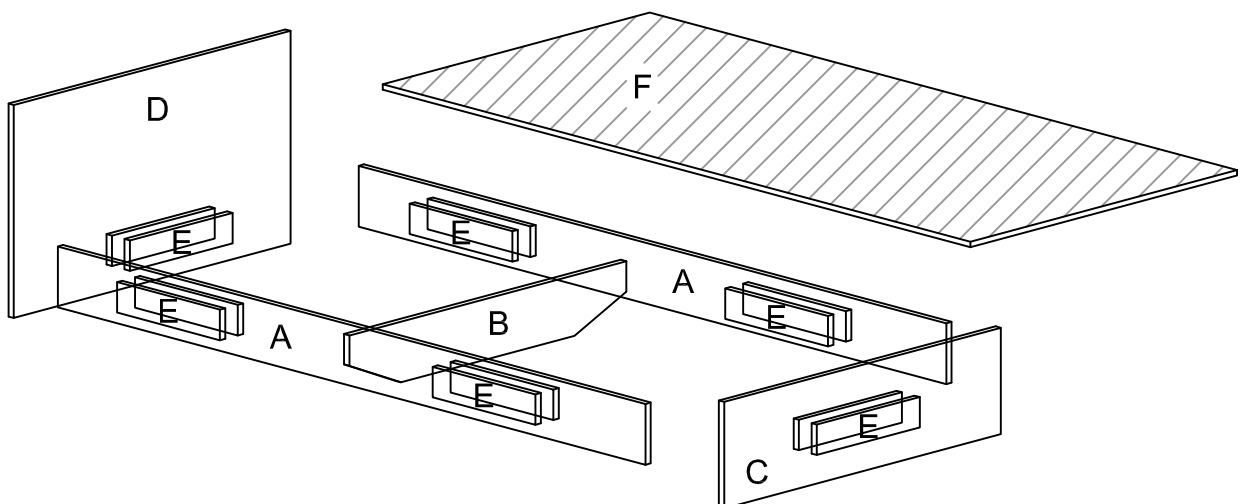




2

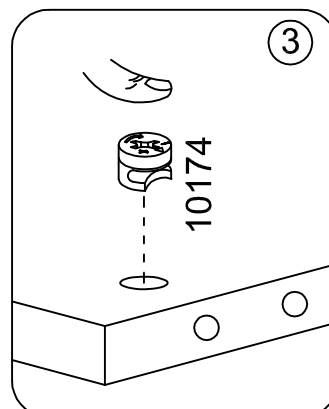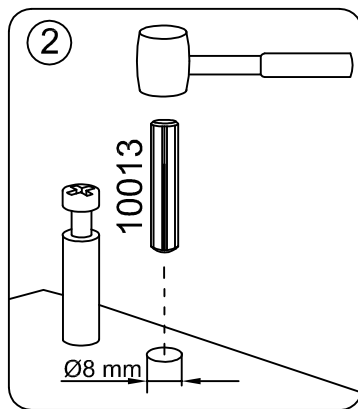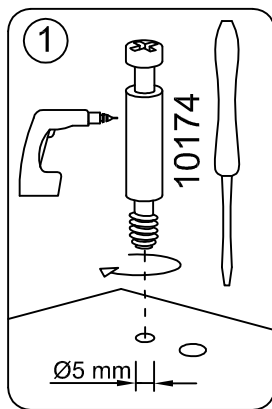


1.1

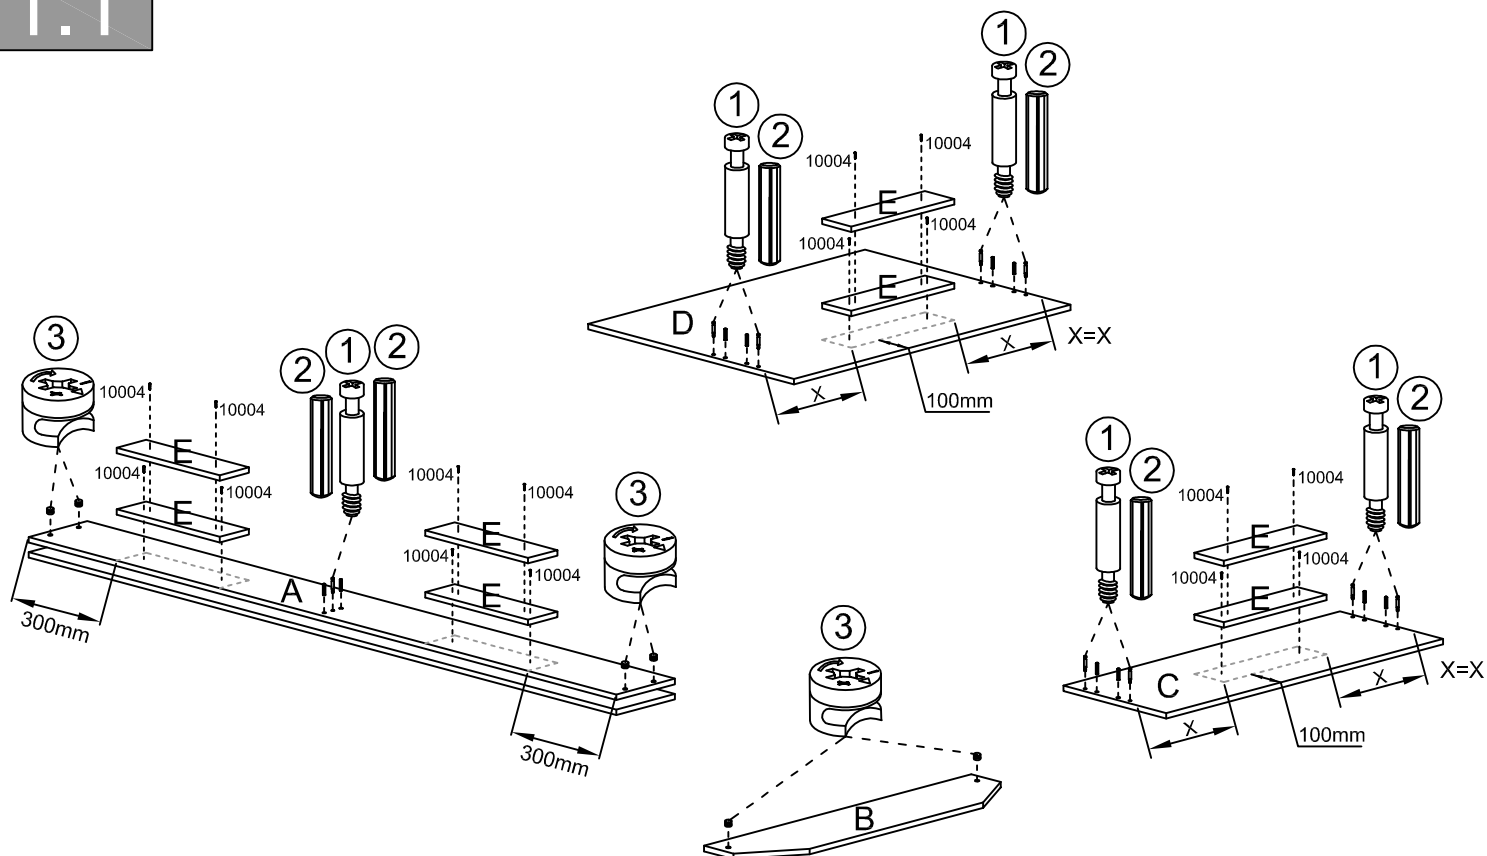



1.2

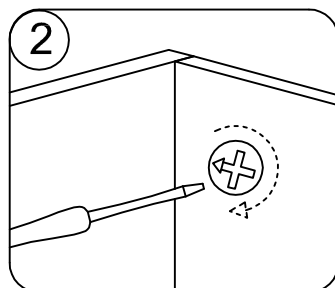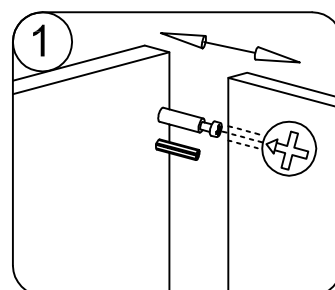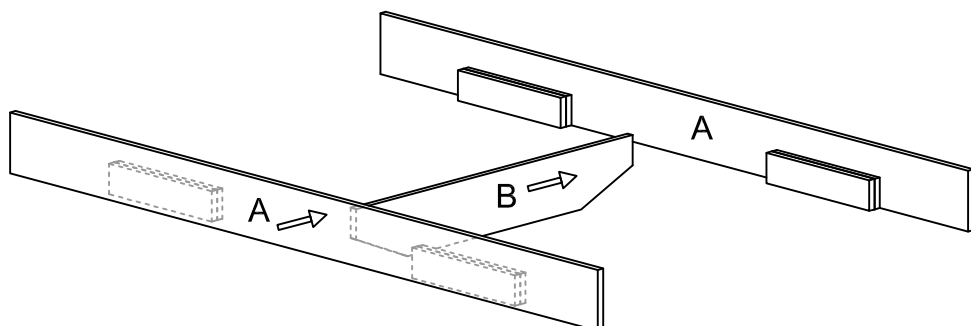

1.3

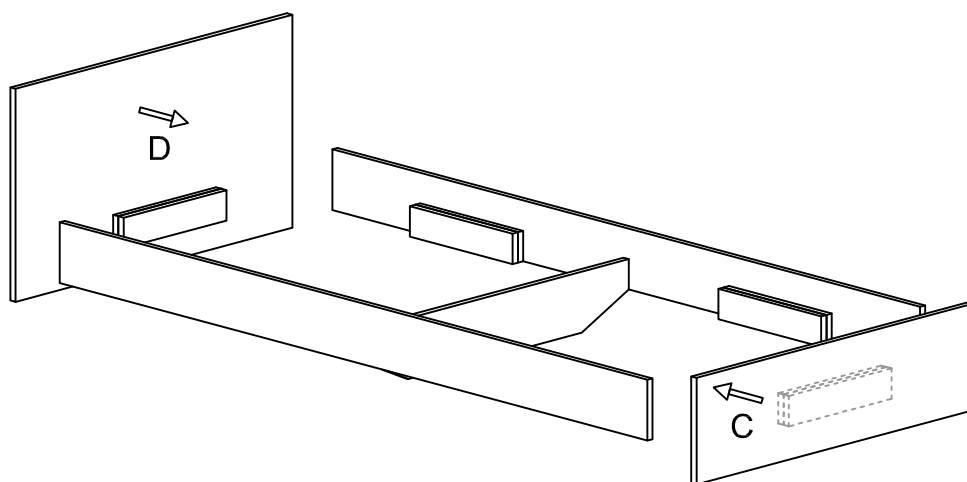

1.4

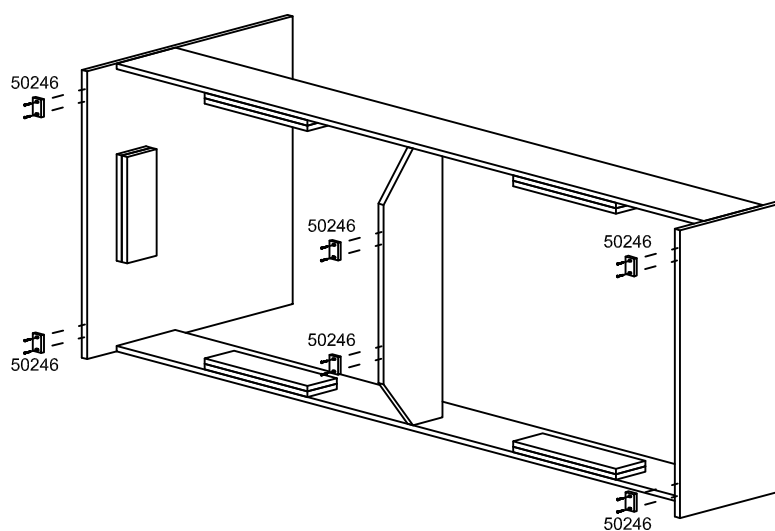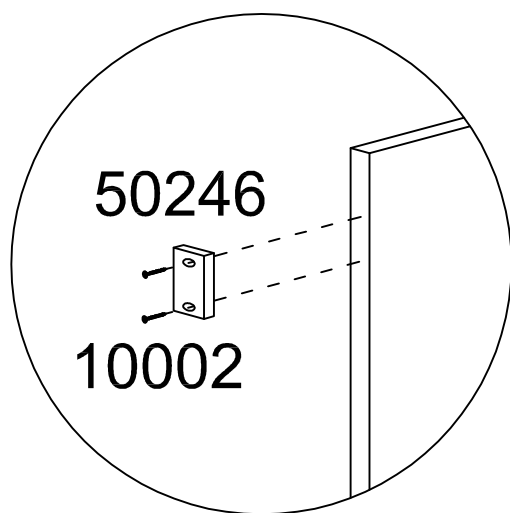

1.5

