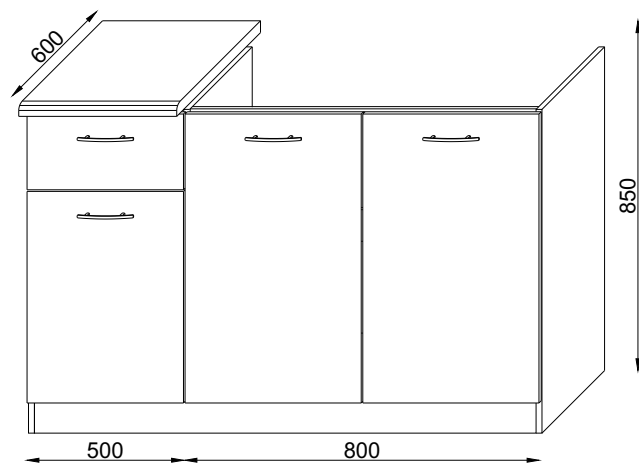
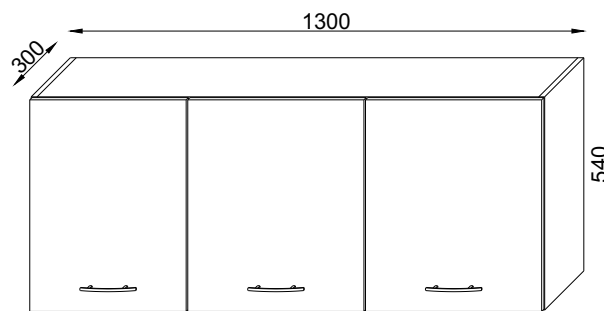
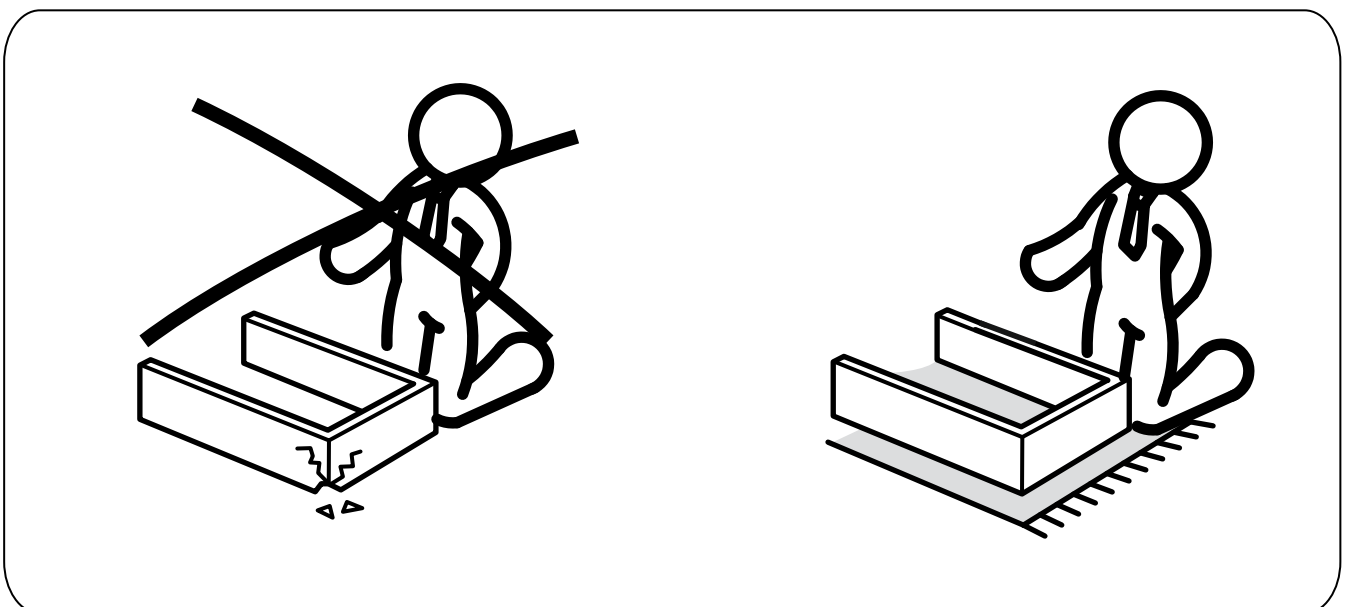
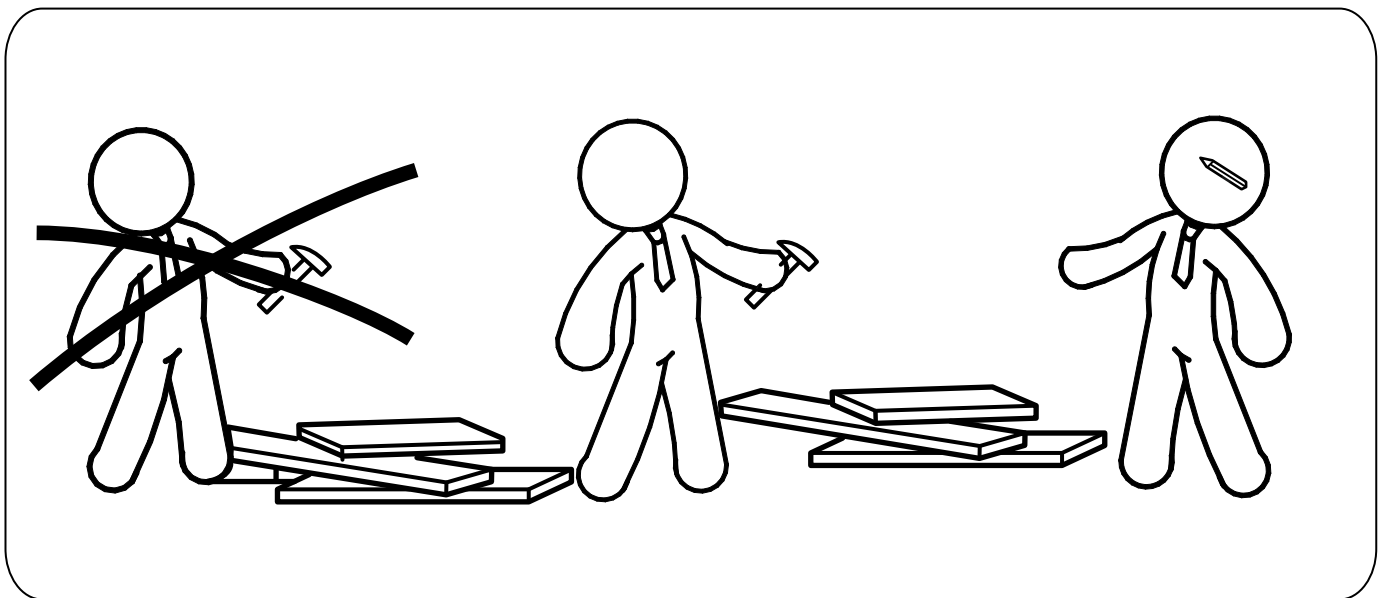
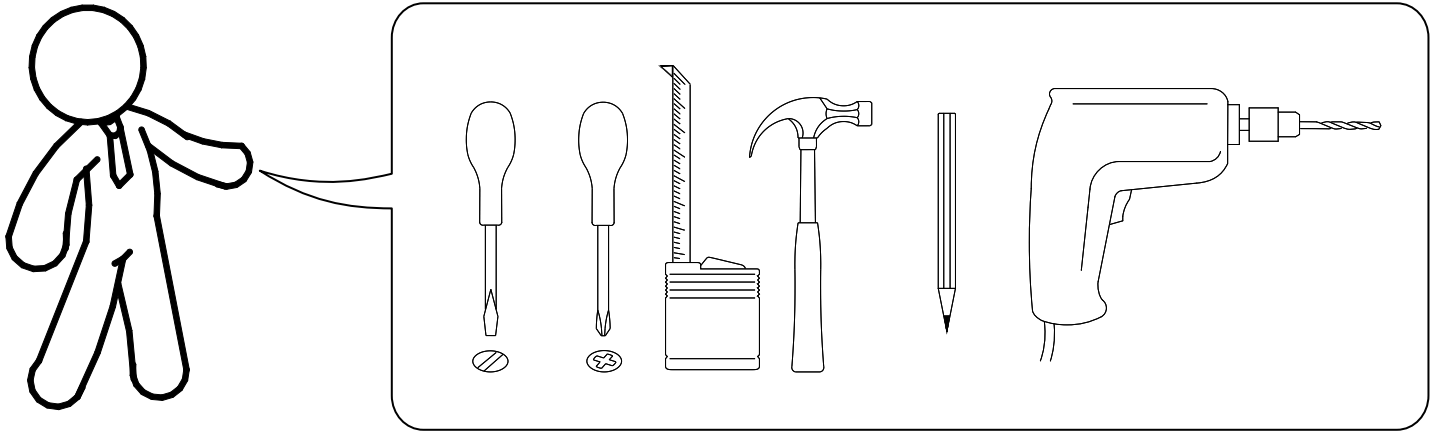




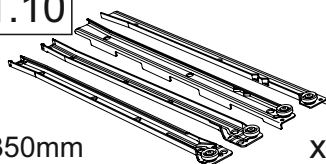






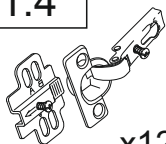
MIRANA Kitchen



ASSEMBLY INSTRUCTIONS

WARNING! THIS PRODUCT SHOULD BE ASSEMBLED BY ADULTS ONLY

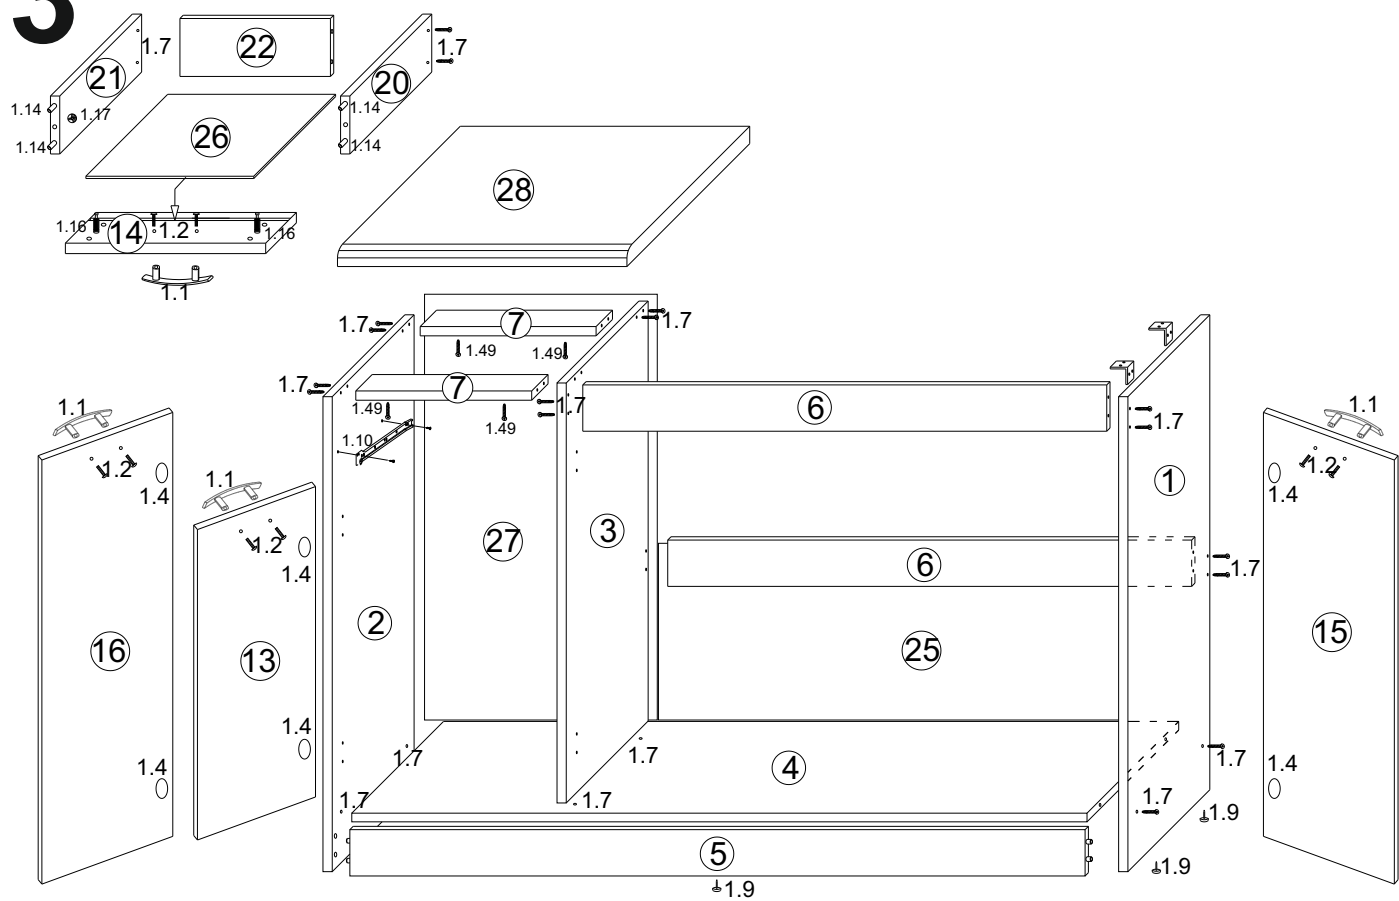


1.16  x2	1.32  x8	1.10  350mm x1		1.7  x39	1.6  x1	1.8  x25
1.17  x2	1.14  x9	1.3  0.035kg	1.18  x3	1.62  x2	1.49 3,5x30mm  x4	1.5 3,5x16mm  x75
1.9  x5	1.4  x12	1.1 4.1-96mm  x7	1.2  x14			

№1 1275/ 565/ 80	10	1270*	280	2
	3	725*	448	1
	6	770*	80	2
	8	540*	280**	2
	9	510*	280	1
	13	536**	496**	1
	14	192**	496**	1
	17	536**	496**	1
	23	251	535/3	2
	24	394	535/3	2
	25	790	305/3	1
	26	458	355/3	1
	27	505	735/3	1
	Strip	505		2
	Fittings			1
№2 1275/ 455/ 100	1	820*	448	1
	2	820*	448	1
	4	1270*	448	1
	5	1270	80	1
	7	485*	80	2
	11	770*	250	1
	12	485*	250	1
	20	350*	100	1
	21	350*	100	1
	22	430*	100	1
	15	732**	396**	1
	16	732**	396**	1
	18	536**	396**	1
	19	536**	396**	1
№2 600/ 500/30	28	500	600**/ 30	1

Diagram illustrating the installation of a roof assembly. The top left shows a cross-section of the roof structure with a 1.3% slope and a 10mm gap. The bottom view shows the roof assembly with a 10mm gap and a 10mm gap. A hand is shown hammering a nail into the roof deck.

3



4

